
Product data sheet
Miniature connectors

Product description	**M16 Male panel mount connector, Contacts: 8 (08-a), unshielded, THT, IP40, M18x0,75, Rear mounting, potted**
Area	**M16 IP40**
Series	**680**
Part no.	**09 0473 65 08**


Illustration (may vary)




Flexplatte

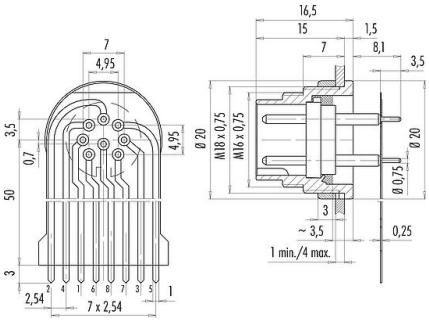

Scale drawing

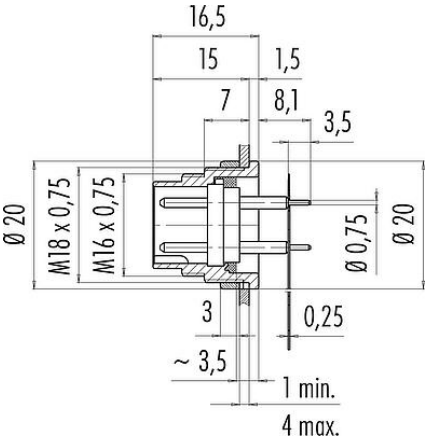

Contact arrangement (Plug-in side)

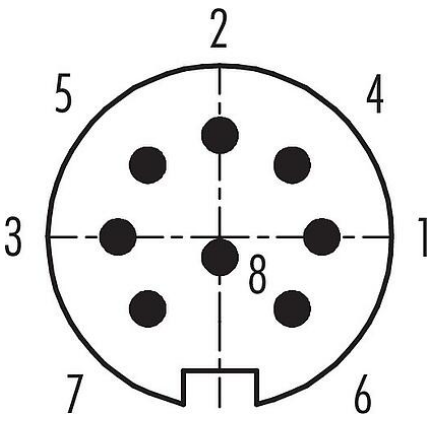

You can find the assembly instructions on the next page.

Technical data

General features

Part no.	09 0473 65 08
Connector design	Male panel mount connector
Type standard	DIN EN 61076-2-106
Version	Connector pin straight
Connector locking system	screw
Termination	THT
Degree of protection	IP40

Product data sheet

Miniature connectors

Product description	**M16 Male panel mount connector, Contacts: 8 (08-a), unshielded, THT, IP40, M18x0,75, Rear mounting, potted**
Area	**M16 IP40**
Series	**680**
Part no.	**09 0473 65 08**

Temperature range from/to	-40 °C / 85 °C
Mechanical operation	> 500 Mating cycles
Weight (g)	14.41
Customs tariff number	85369010
Country of Origin	DE

Electrical parameters

Rated voltage	60 V
Rated impulse voltage	500 V
Rated current	5.0 A
Insulation resistance	≥ 10^{10} Ω
Pollution degree	1
Overvoltage category	I
Insulating material group	III
EMC compliance	unshielded

Material

Housing material	Zinc die-cast nickel-plated
Contact body material	PBT (UL94 V-0)
Contact material	CuZn (brass)
Contact plating	Ag (silver)
REACH SVHC	CAS 7439-92-1 (Lead)
SCIP number	e62366ea-4070-4b89-a685-9b12ecd1c313


Classifications

eCl@ss 11.1	27-44-01-09
ETIM 9.0	EC003569

Product data sheet
Miniature connectors

Product description	**M16 Male panel mount connector, Contacts: 8 (08-a), unshielded, THT, IP40, M18x0,75, Rear mounting, potted**
Area	**M16 IP40**
Series	**680**
Part no.	**09 0473 65 08**

Assembly instructions / Panel cut-out

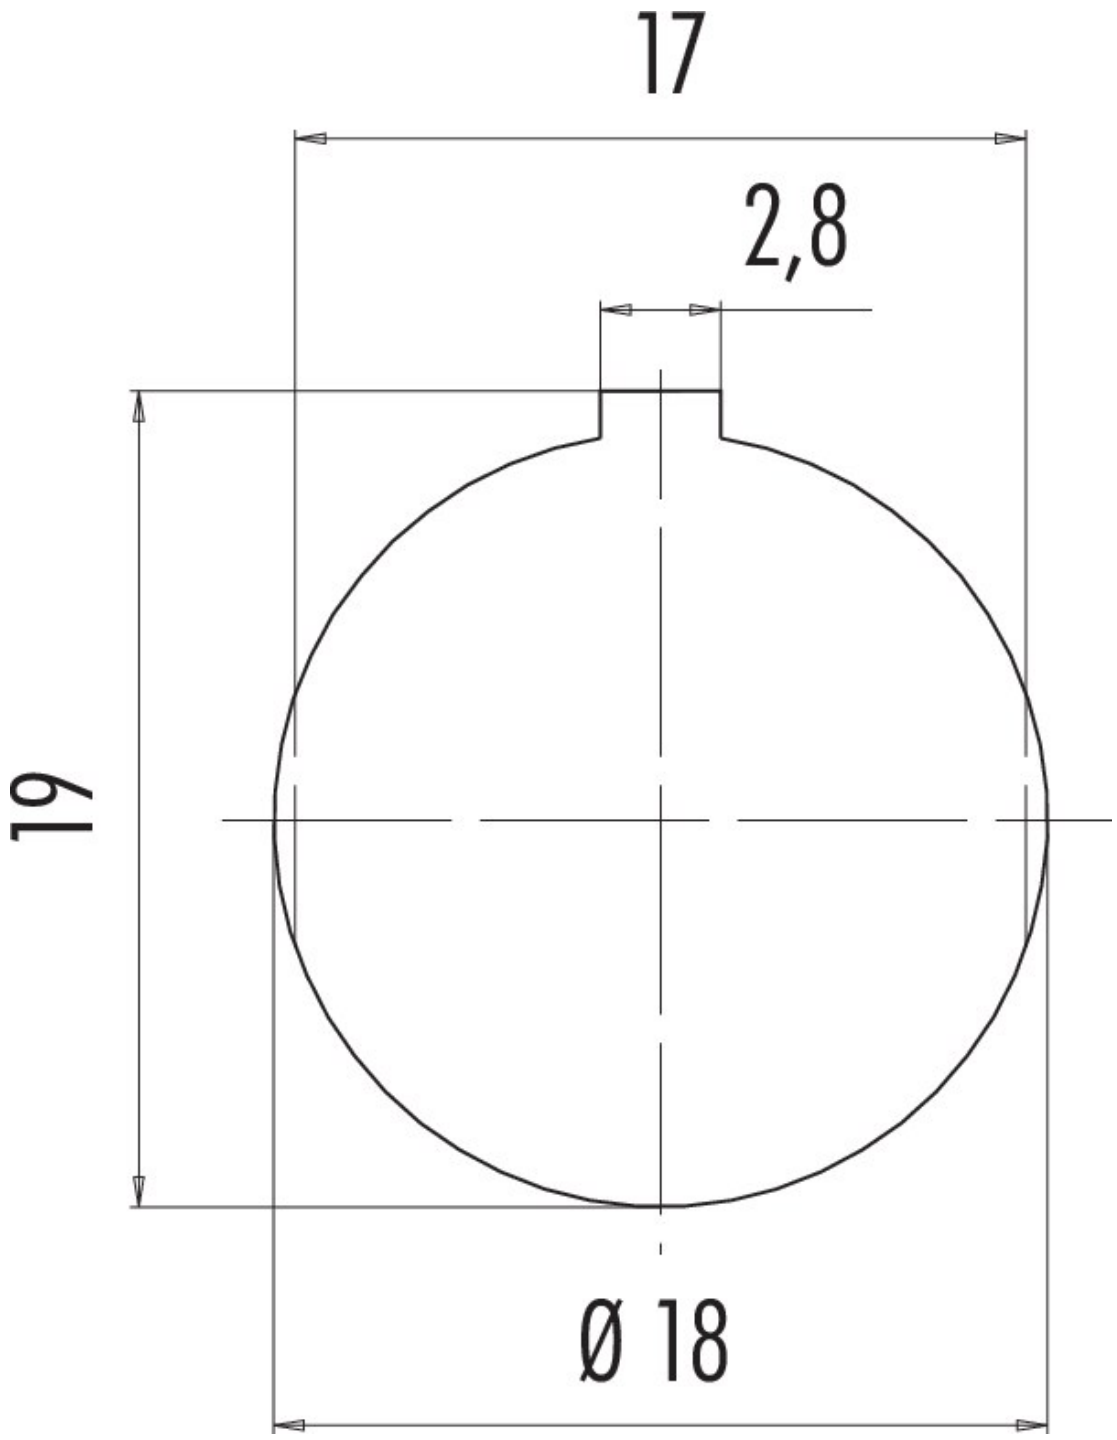

Product data sheet
Miniature connectors

Product description	**M16 Male panel mount connector, Contacts: 8 (08-a), unshielded, THT, IP40, M18x0,75, Rear mounting, potted**
Area	**M16 IP40**
Series	**680**
Part no.	**09 0473 65 08**

Security notices

The connector must not be plugged or unplugged under load. Non-observance and improper use can result in personal injury.

The connectors have been developed for applications in plant engineering, control and electrical equipment construction. The user is responsible for checking whether the connectors can also be used in other areas of application.

Connectors which are used in circuits with voltages dangerous to the touch may only be installed and used by, or under the supervision of, persons with electrical engineering training, taking into account the applicable regulations and standards.

The user must take suitable safety precautions to ensure that the connector cannot be accidentally disconnected.

Please observe the pollution degree and the overvoltage category. For further information, please refer to the download center "Technical Information".

To lock the cable connector with the device connector, the threaded ring is tightened "hand-tight" (approx. 60 cNm).